 



AUTO SHUT OFF WATER FILTER SYSTEM

CARTRIDGE REPLACEMENT INSTRUCTION

1. Unscrew cartridge slowly – see below (Ensure the water supply is turned off and de-pressurised)



Ball Valve ON position

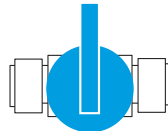

Ball Valve OFF position



Hold cartridge tightly



then Turn cartridge slowly to the left to unscrew.

2. Once cartridge is removed, discard. (Note: there may be a few drops of water when removed)
3. Screw in the new cartridge/s into the head to the right, until it firmly stops.
4. Note: For twin and triple systems ensure cartridges are in correct order.
5. Turn on filter tap, run water & check system (if water appears white, just run for a few minutes, this is just air, and is not harmful)