


# Typical Installation with Remineralisation bestaqua COFFEE 22, 24 & 26

**Important pre installation detail:**  
Incoming water:

Pressure  
**Minimum: 350 kPa** - if < 350 kPa seek advice  
**Maximum: 600 kPa** - if > 600 kPa use pressure limiting valve ( PLV600AK1 or similar)

Flow  
**Minimum 10 lpm** - check water tap for flow if < 10 lpm seek advice  
To check flow rate: run tap into a bucket for 30 secs. Measure water in litres.  
Multiply x 2 = litres per minute (lpm)

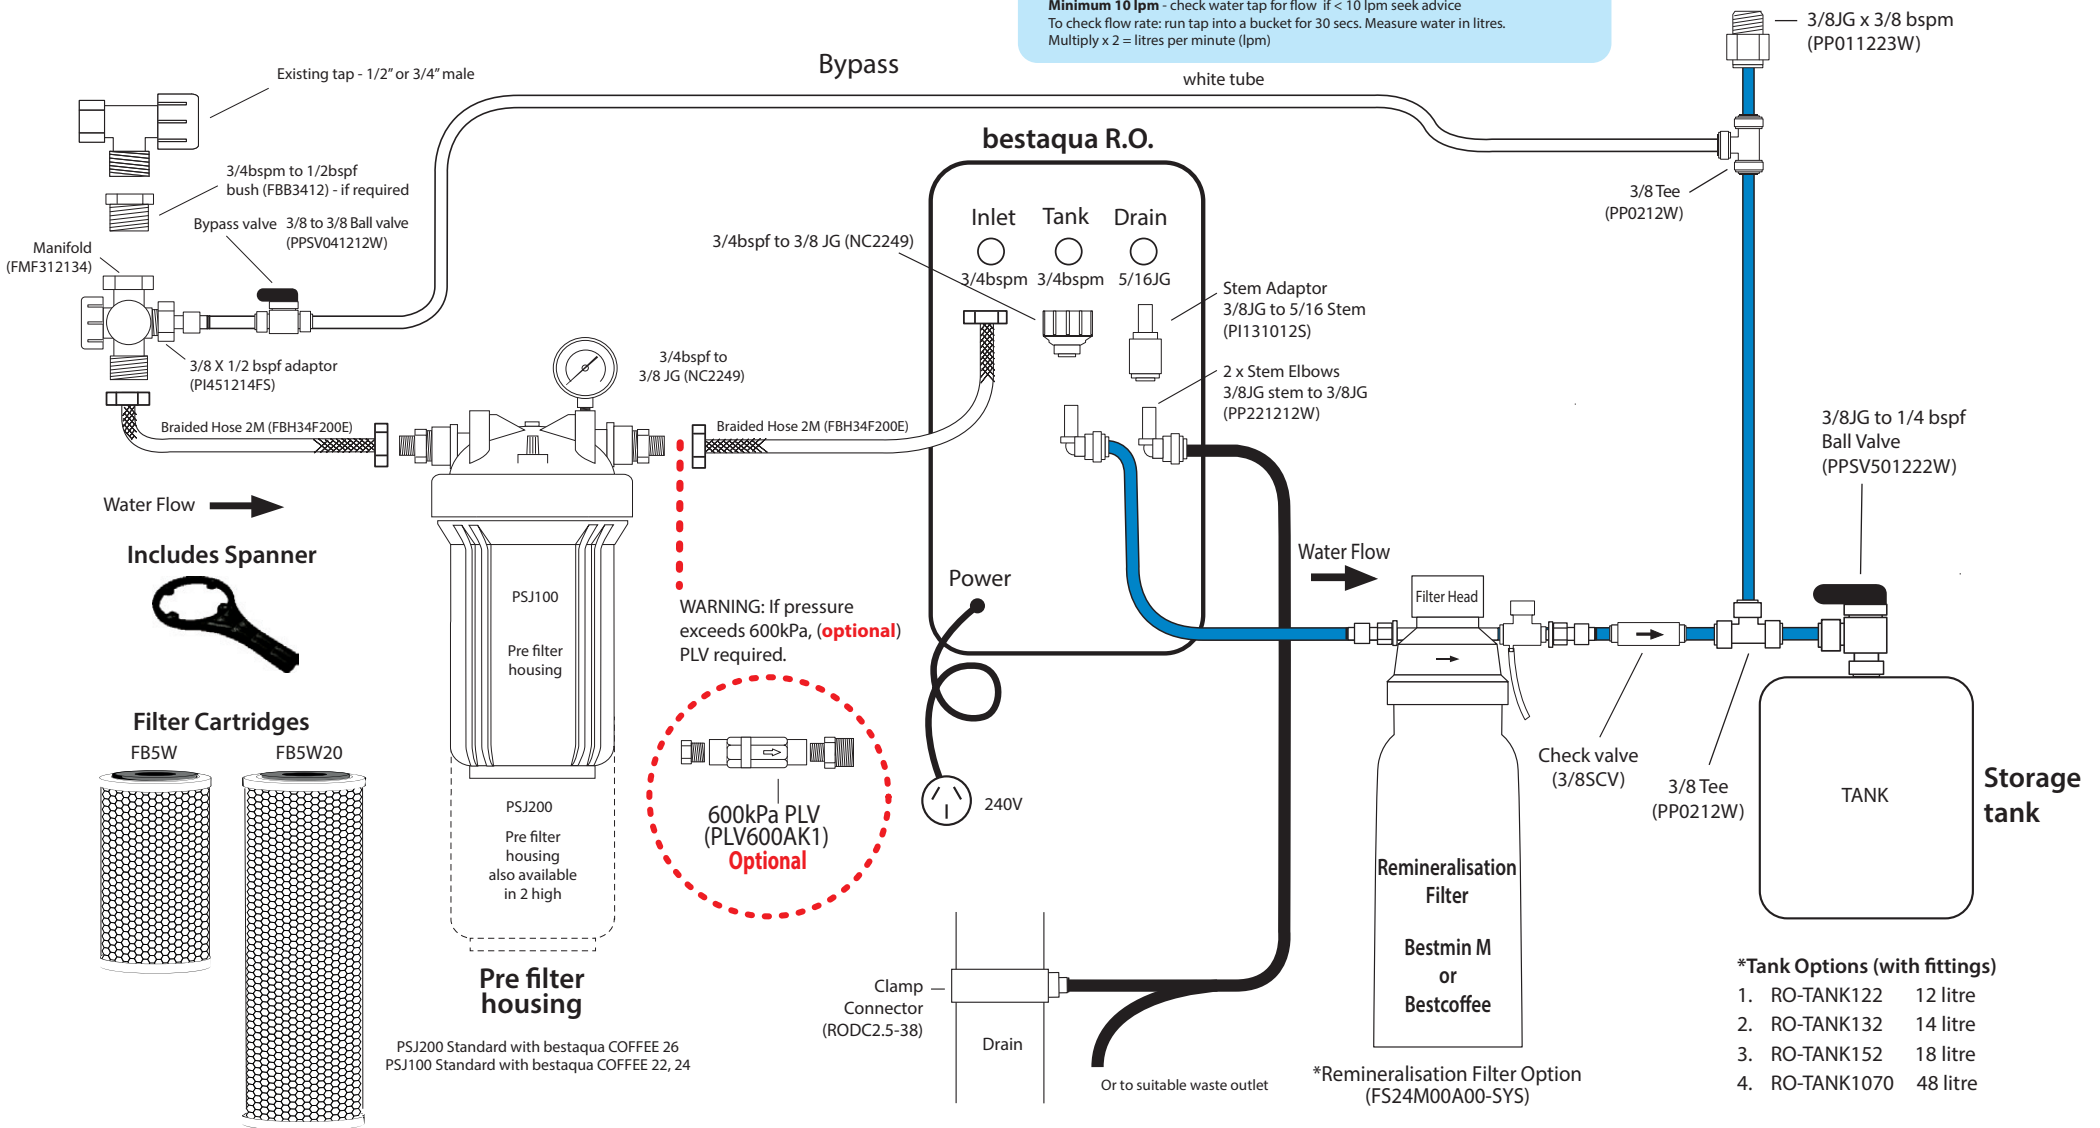

**\*Tank Options (with fittings)**

1. RO-TANK122	12 litre
2. RO-TANK132	14 litre
3. RO-TANK152	18 litre
4. RO-TANK1070	48 litre